




Troubleshooting Guide – Not Starting/Running

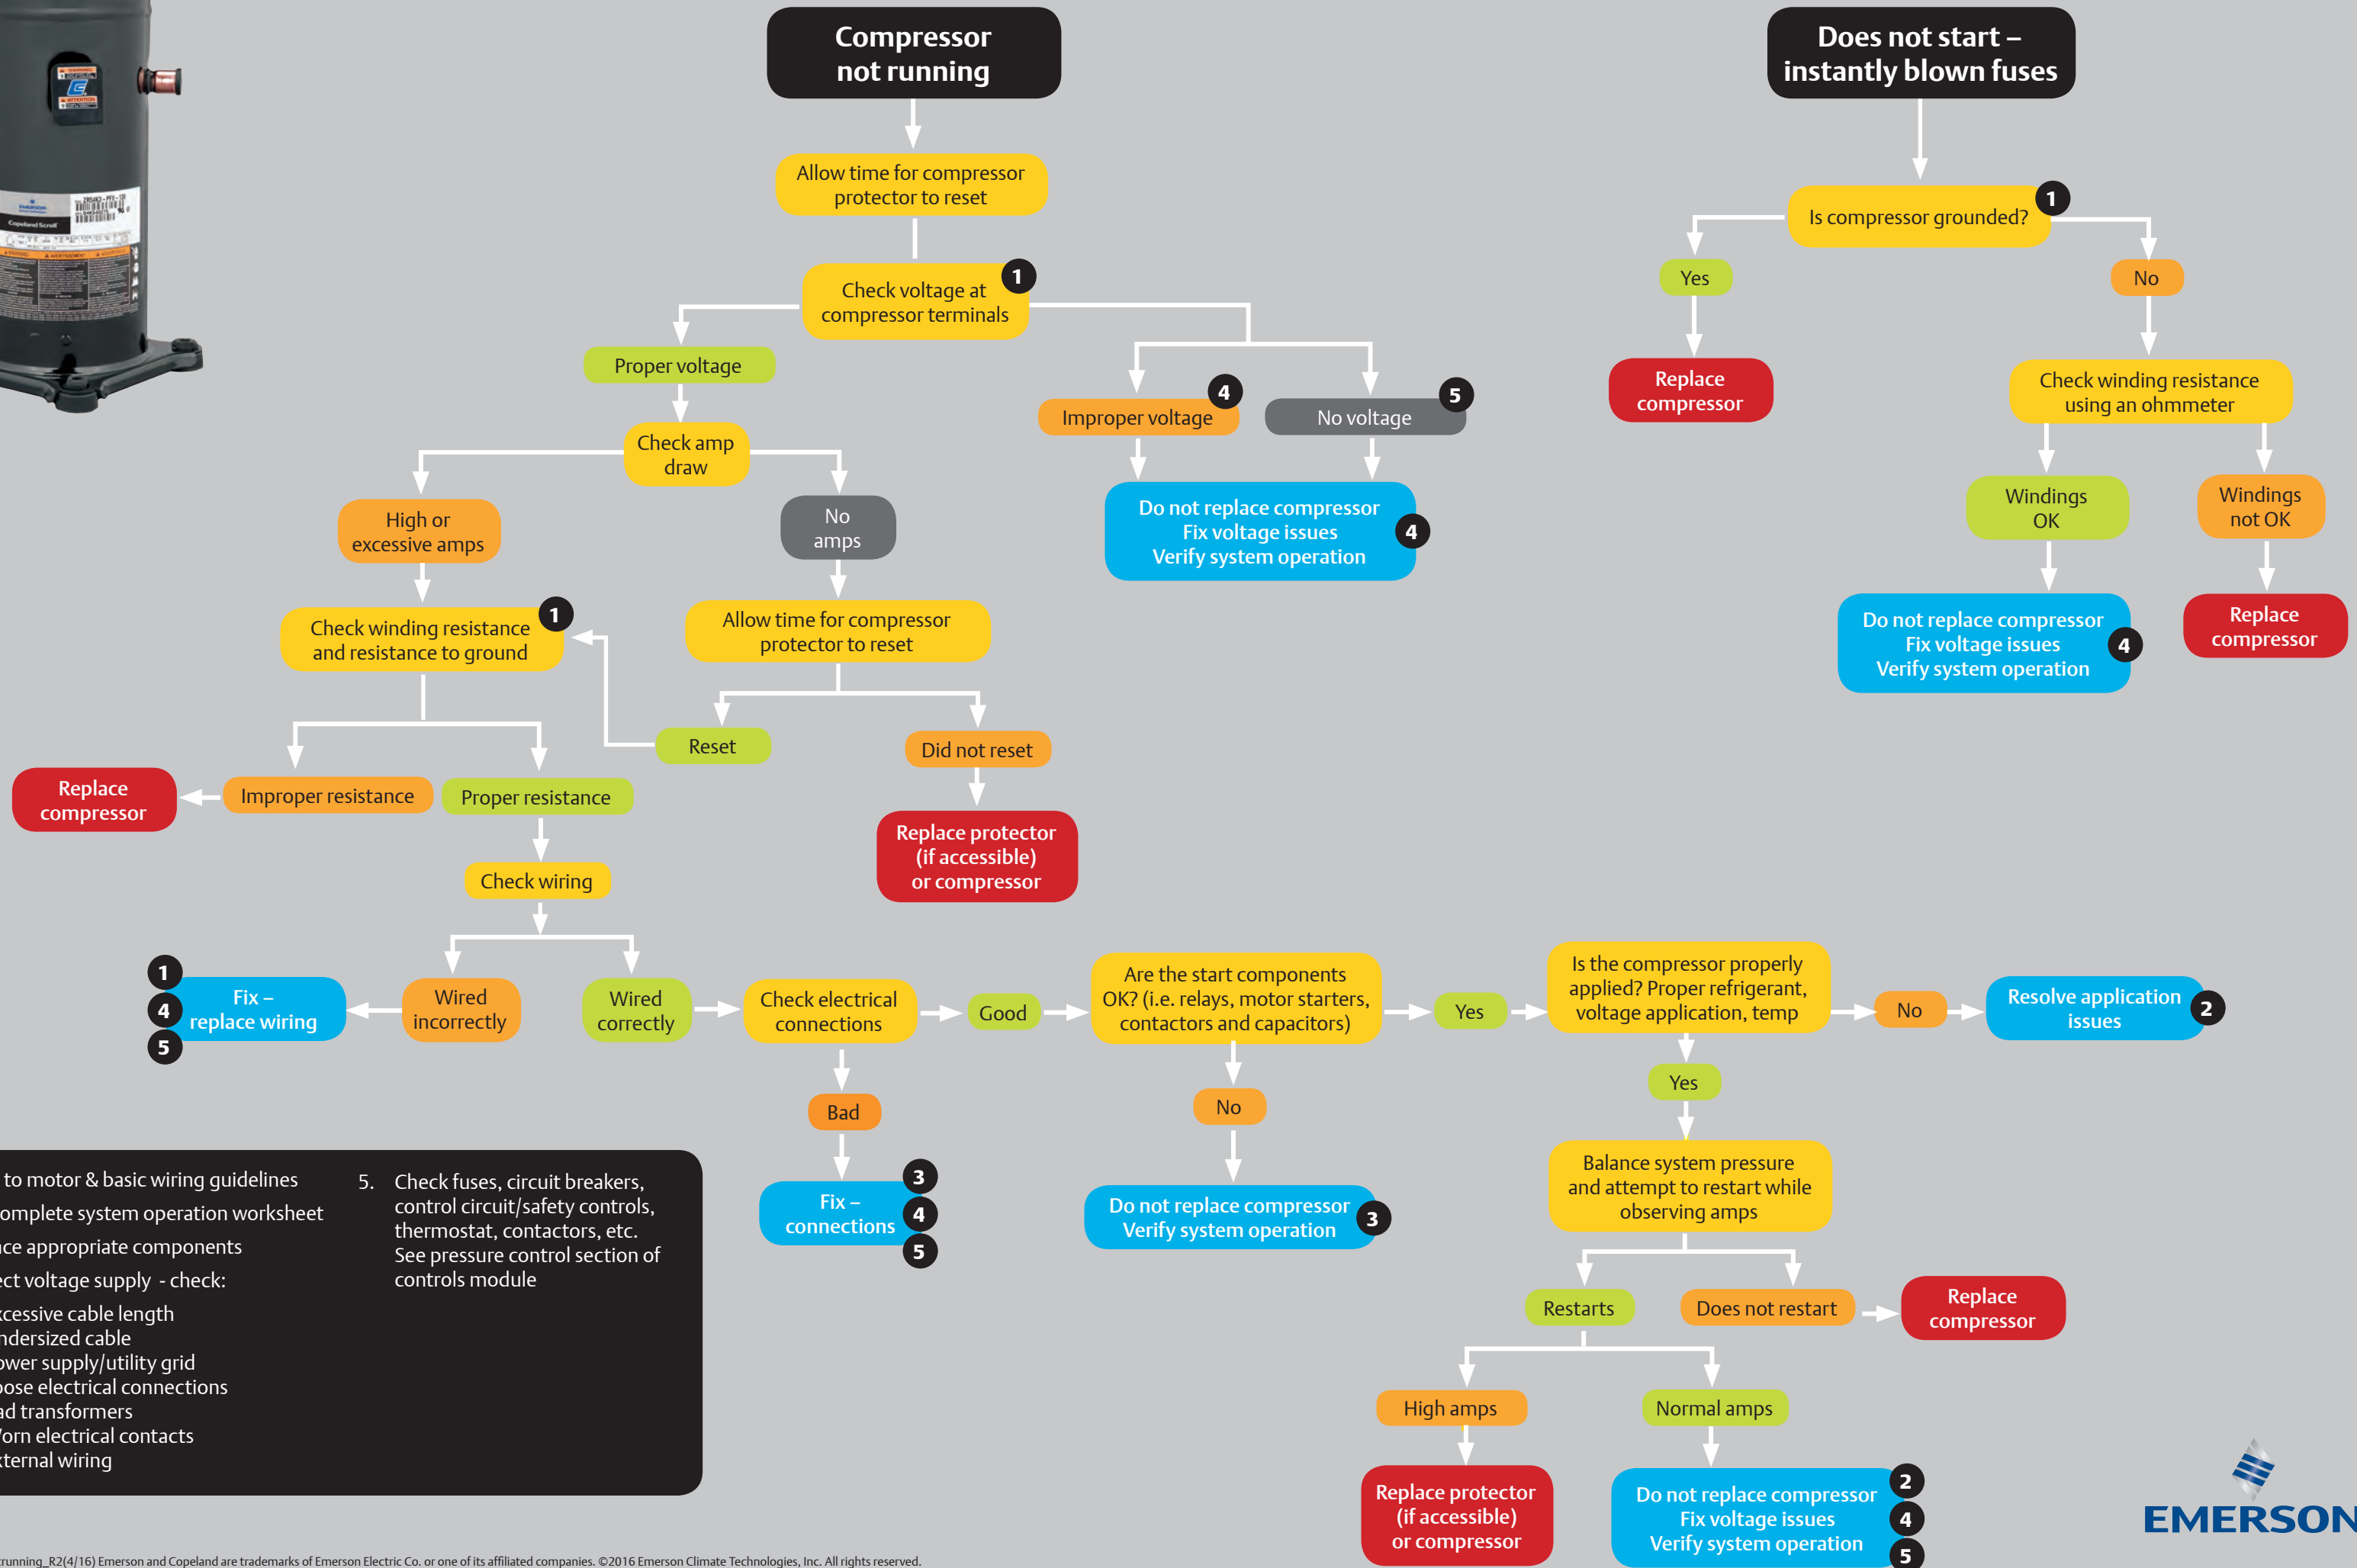

1. Refer to motor & basic wiring guidelines
2. See complete system operation worksheet
3. Replace appropriate components
4. Correct voltage supply - check:
 - Excessive cable length
 - Undersized cable
 - Power supply/utility grid
 - Loose electrical connections
 - Bad transformers
 - Worn electrical contacts
 - External wiring
5. Check fuses, circuit breakers, control circuit/safety controls, thermostat, contactors, etc. See pressure control section of controls module

